

# Camp Chef Camp Stove Accessory Guide

## Accessories for Two Burner Stoves

Model #	BBQ Box	Griddles	Covers	Bags	Screen	Shelves
DB-60D	BB-60L, BB-100L	SG-60, SG-30, CGG-16B, FG-32, FG-16	PC-46	RCB-60, CB-60UNV	WS-60	LS-60P
EX-60LW	BB-60L, BB-100L	SG-60, SG-30, CGG-16B, FG-32, FG-16	PC-32	RCB-60, CB-60UNV	WS-60	LS-60P
EX-60LWC	BB-60L, BB-100L	SG-60, SG-30, CGG-16B, FG-32, FG-16	PC-32	RCB-60, CB-60UNV	WS-60	LS-60P
EX-170LW	BB-60L, BB-100L	SG-60, SG-30, CGG-16B, FG-32, FG-16	PC-32	RCB-60, CB-60UNV	WS-60	LS-60P
EX-280LW	BB-60L, BB-100L	SG-60, SG-30, CGG-16B, FG-32, FG-16	PC-32	RCB-60, CB-60UNV	WS-60	LS-60P

## Accessories for Three Burner Stoves

Model #	BBQ Box	Griddles	Covers	Bags	Screen	Shelves
GB-90D	BB-90L, BB-100L	SG-100, SG-90, CGG-24, FG-13	PC-90	RCB-90, CB-90	WS-90	LS-90P
TB-90LW	BB-90L, BB-100L	SG-100, SG-90, CGG-24, FG-13	PC-42	RCB-90, CB-90	WS-90	LS-90P
SPG-90B	BB-90L, BB-100L	SG-100, SG-90, CGG-24, FG-13	PC-42	RCB-90, CB-90	WS-90	LS-90P